



# **PAINTING TEXTURES:** **CARBON FIBER**



**ARMORED  
KOMODO**  
HEAVY INDUSTRIES

# MATERIALS NEEDED

- Stockings
- Binder clips [To hold the stretched stocking in place]
- Armored Komodo Paints



**ARMORED  
KOMODO**  
HEAVY INDUSTRIES

# PAINTS NEEDED



\*paints on photo are lacquer based



**ARMORED  
KOMODO**  
HEAVY INDUSTRIES

# LAYER 1:

Gloss Gray Surface Primer



# LAYER 2:


Charcoal Black



ARMORED  
KOMODO  
HEAVY INDUSTRIES

# PAINING THE TEXTURE

After the charcoal black layer [layer 2], wrap the part in stockings and hold it in place with a binder clip.

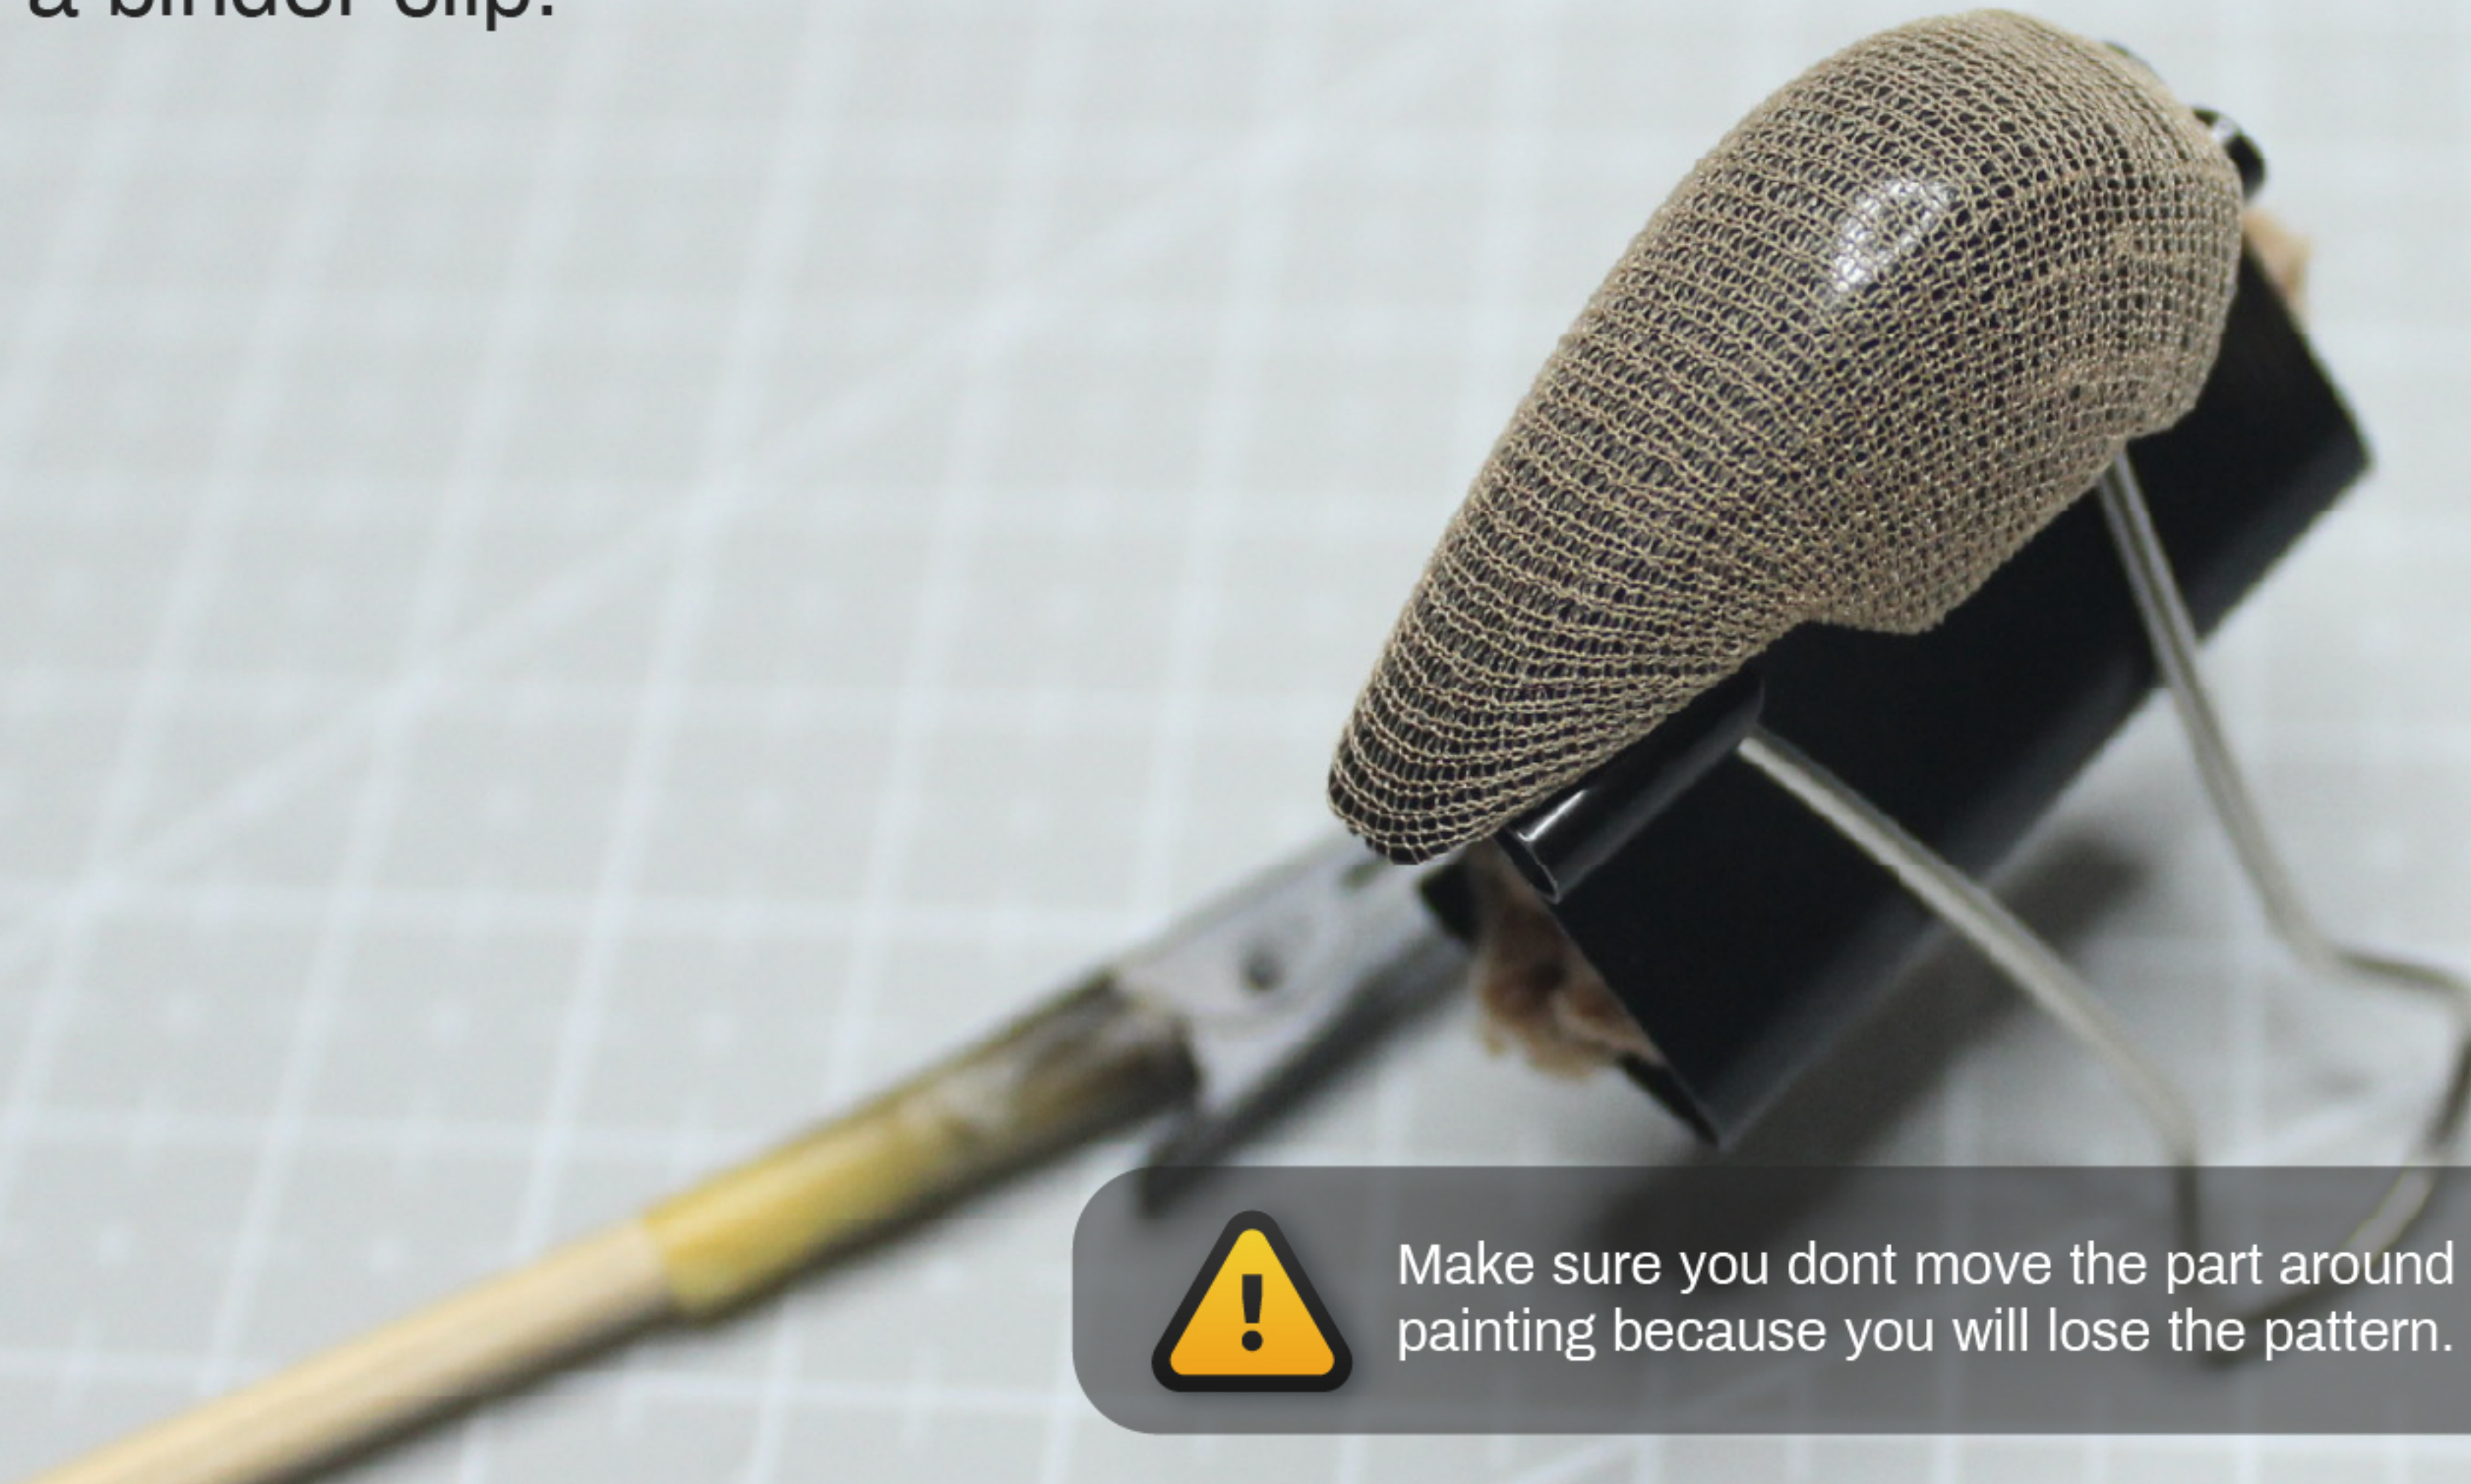

Make sure you dont move the part around while painting because you will lose the pattern.



**ARMORED  
KOMODO**  
HEAVY INDUSTRIES


## LAYER 3:

Aluminum



## LAYER 4:

Mirror Gloss

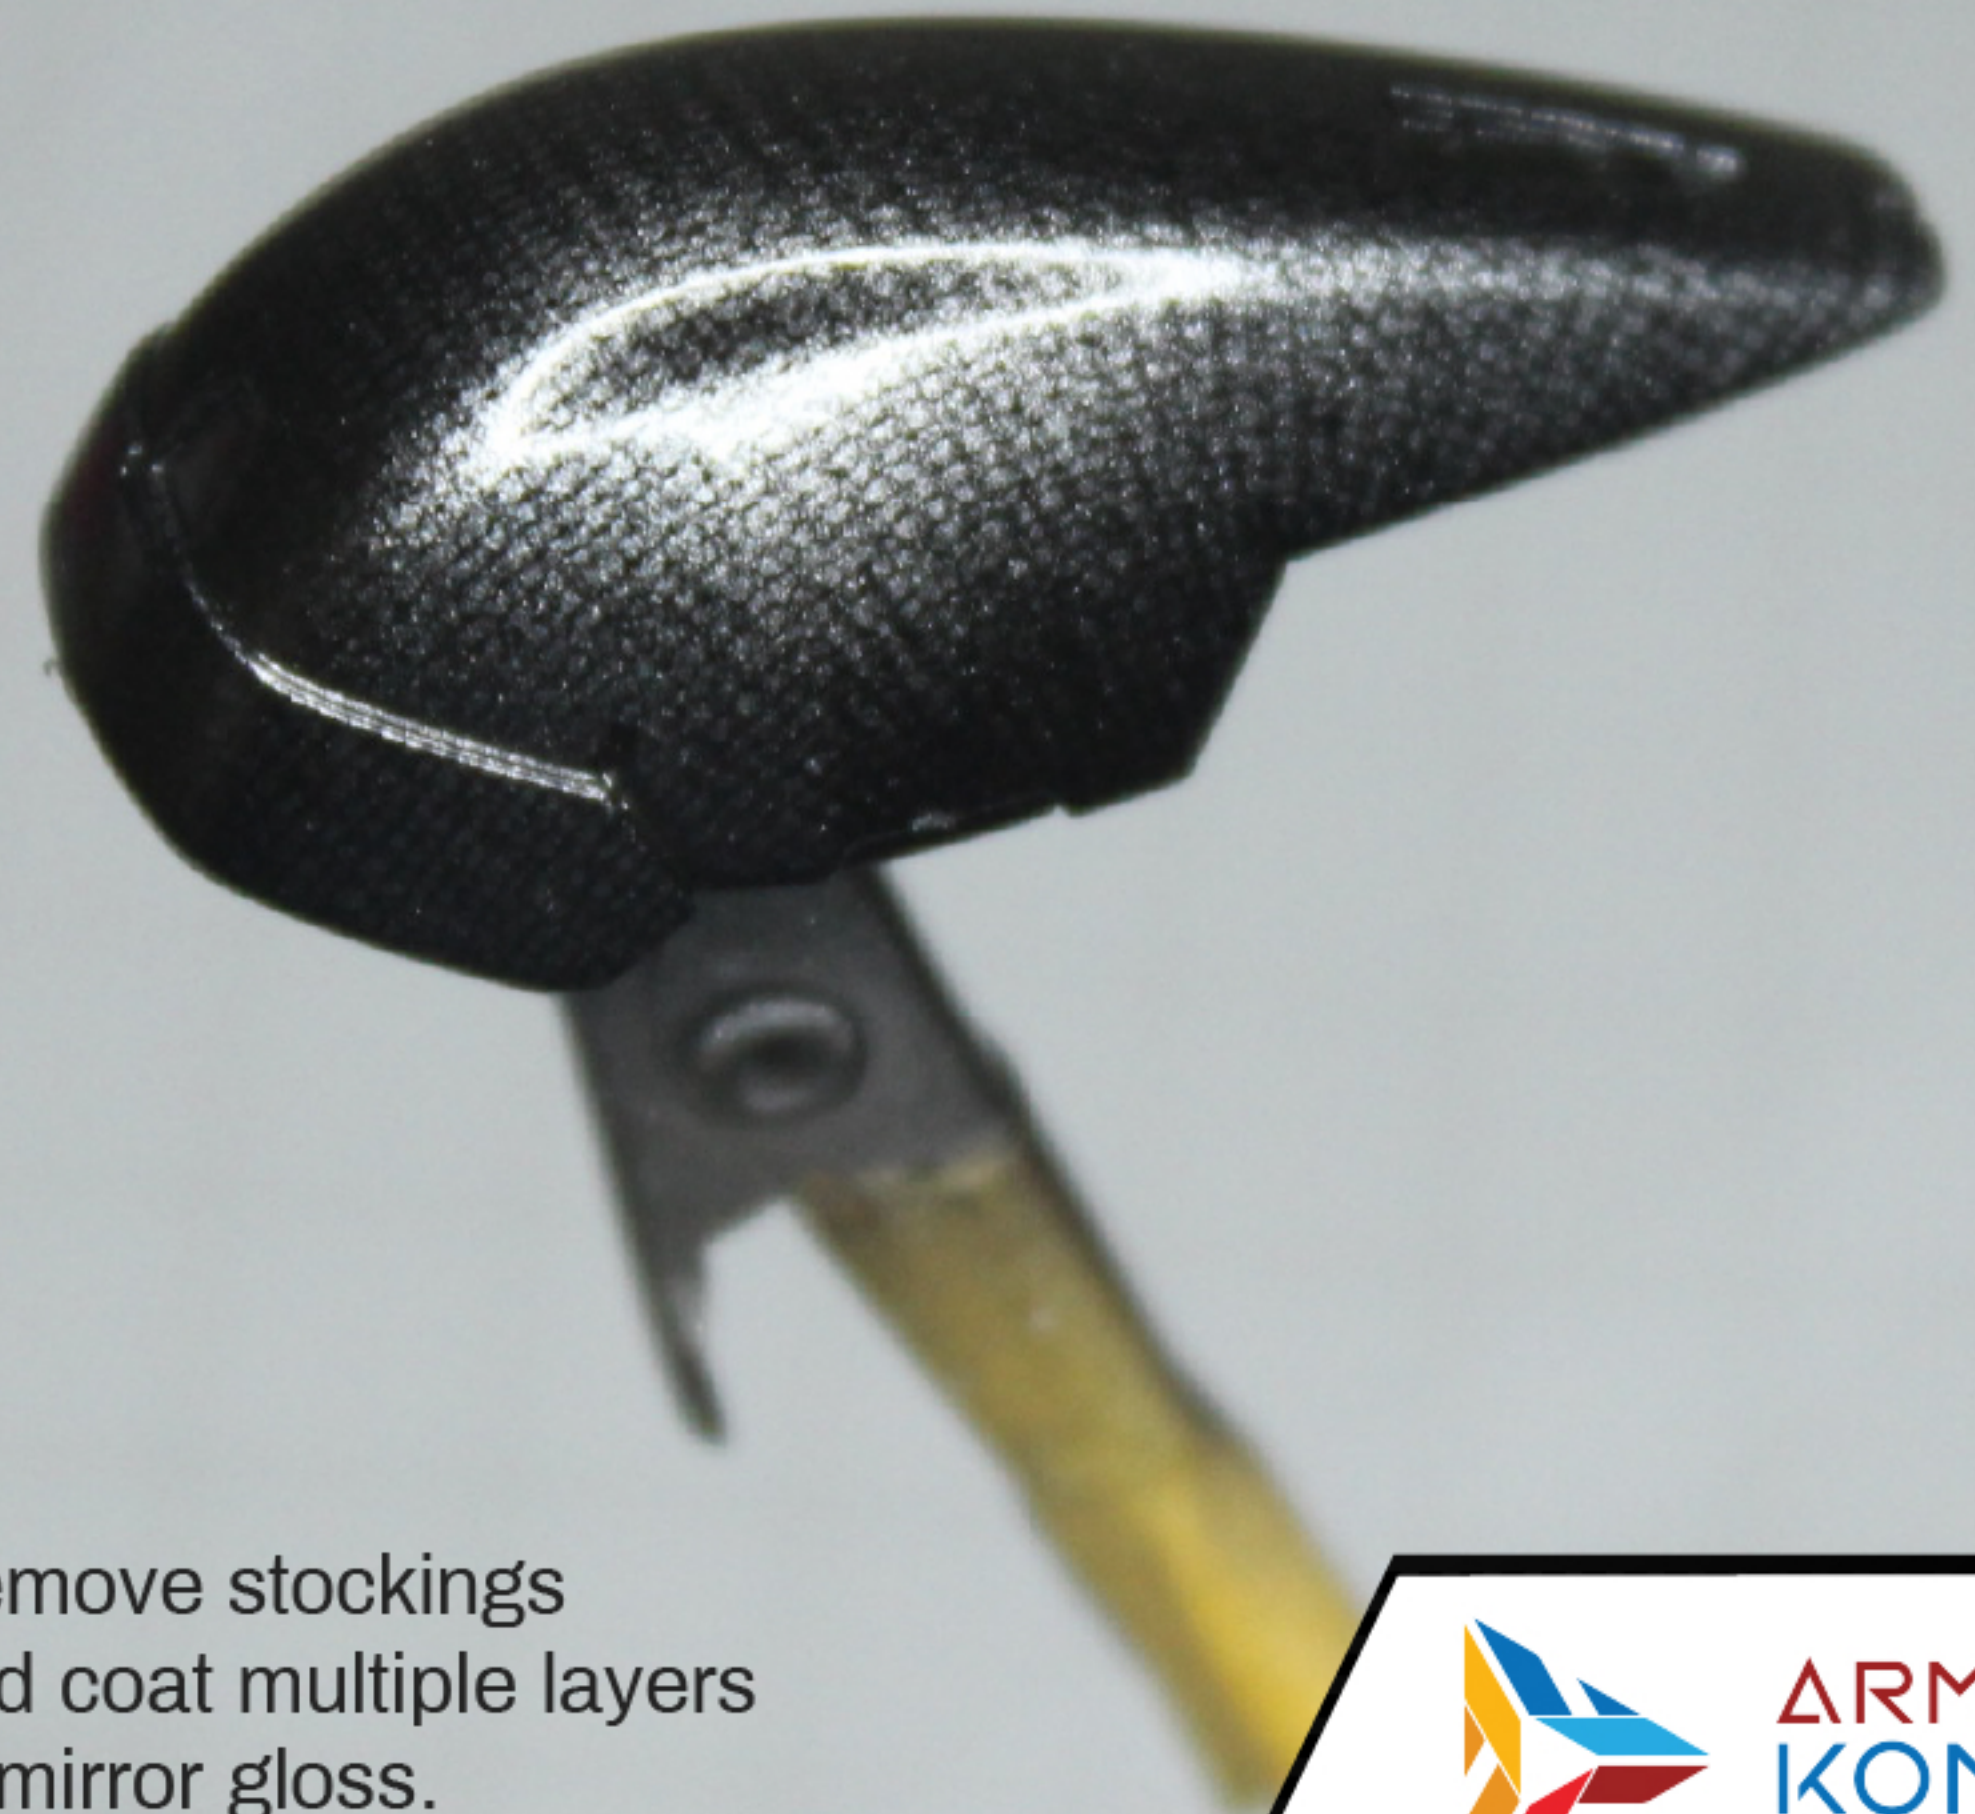

\*remove stockings  
and coat multiple layers  
of mirror gloss.



**ARMORED  
KOMODO**  
HEAVY INDUSTRIES

**RESULT:**



**ARMORED  
KOMODO**  
HEAVY INDUSTRIES

# RESULT:



**ARMORED  
KOMODO**  
HEAVY INDUSTRIES